

METALLIC DISC BRAKE PADS



INSTALLATION INSTRUCTIONS


1 OPEN WIDE

Turn the inboard pad adjuster knob counterclockwise until it stops. Remove the old pads and discard.



2 MAKE A SPRING SANDWICH

Assemble the spring between the new left and right pads. Align the spring to the pad as shown.

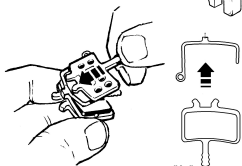

3 SQUEEZE THE SANDWICH

Squeeze the pad assembly between your fingers.



4 FEED THE BRAKE

Insert the sandwich into the brake. Firmly press until they 'click' into position.

The pad marked "R" goes on the spoke side of the brake.

